
# ROLLER SHADE

# PLUG & PLAY

RESOURCE


# THINGS TO KNOW

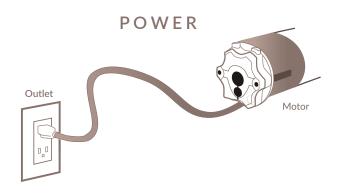


The Plug and Play motorized system uses a traditional 3 prong plug to draw power from a wall outlet. Each motor requires its own connection of 110 volt direct power.

### LOCATION

## **OUTSIDE OF WINDOW**

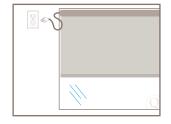

#### INSIDE OF WINDOW

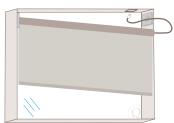


Since outlets are not typically easy to hide, if outlet is located outside of the window opening, we recommend hiding cords behind a drape or a top treatment.

### CONTROLS

#### WALL SWITCH



#### REMOTE

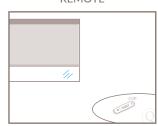

Our wireless wall switches and remotes should be operated anywhere within 60 feet from the shade window. Our remote controls are battery powered and RTS controlled enabling users to control their window treatments by radio waves.

