


DRAPERY
PROGRAMMING
RESOURCE

THINGS TO KNOW

BATTERY MOTOR

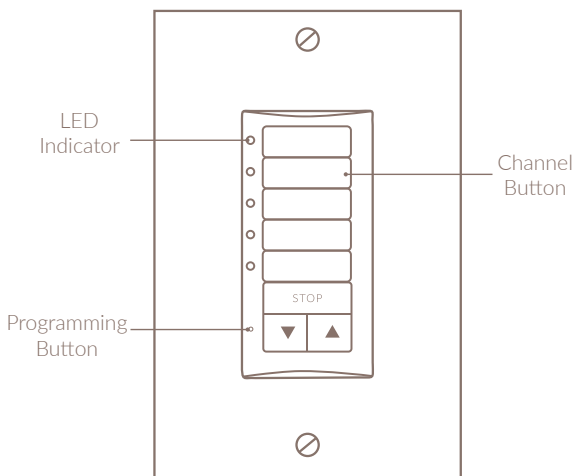

WIRELESS WALL SWITCH

- 1 Insert battery pack and listen for beep to indicate power on.
- 2 If programming a 1 channel switch, go to step 3. If 5 channel, Select a channel to link by pressing the appropriate channel button. The adjacent LED will light to indicate the channel has been selected.
- 3 Press and hold UP and DOWN buttons simultaneously until drape jogs once. Switch is now paired to the motor.
- 4 Test programming! Drape should open by pressing UP button and close when pressing DOWN button.
- 5 If direction is incorrect, press and hold STOP button until drape jogs once to modify direction. Repeat step 4 to confirm.
- 6 Using a paper clip, briefly press the Programming Button until drape jogs. All settings are now confirmed and programming is complete.
- 7 If programming multiple treatments (5 channel switch), repeat sequence for subsequent channels.



QUILTcraft