


ROLLER SHADE
PROGRAMMING
RESOURCE

THINGS TO KNOW

PLUG AND PLAY MOTOR

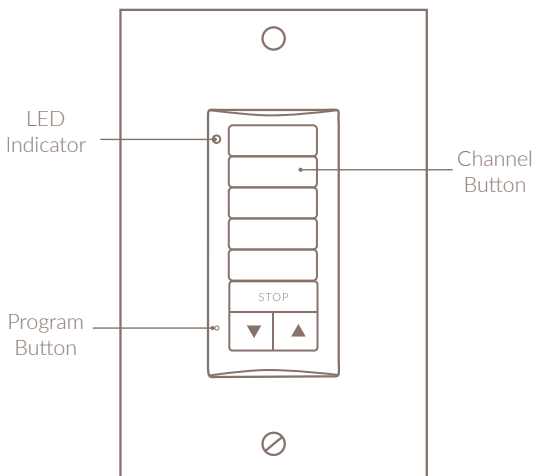

WIRELESS WALL SWITCH

- 1** Plug in shade power cord for 10 seconds. Remove plug from power for 2 seconds. Plug in cord again and leave in place. Roller shade will begin to move.
- 2** Select a channel to link by pressing the appropriate channel button. The adjacent LED will light to indicate the channel has been selected.
- 3** Using a paper clip, briefly press the Programming Button until roller shade jogs.
- 4** Test roller shade by pressing UP.
- 5** Set upper limit by pressing UP to move the shade to the desired upper position. Press and hold STOP and DOWN simultaneously and release once shade jogs. Upper limit is now programmed.
- 6** Set lower limit by pressing DOWN to move the shade to the desired lower position. Press and hold STOP and UP simultaneously and release once shade jogs. Lower limit is now programmed.
- 7** To confirm and complete limit programming, press and hold the UP button until shade jogs.
- 8** Repeat sequence for subsequent channels.



QUILTCRAFT