


## ROLLER SHADE


# CHANNEL INSTALLATION

## RESOURCE


### INSIDE MOUNT

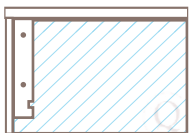


**BRACKET IN PLACE** Brackets are in place (see Roller Shade Installation Instructions for more details about this step).

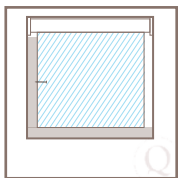


**SIDE CHANNEL INSTALLATION** Position side channel to the rear edge of bracket and position the sill channel and confirm placement is accurate.

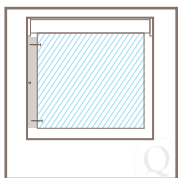


Send a screw through the center of the side channel to hold in place. Remove sill channel. Mount Upper and lower screws into the side channel.

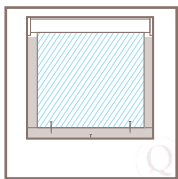

**SILL CHANNEL INSTALLATION** Now that side channels are mounted, position sill channel with both ends touching the face of the side channels. Drive the center screw through the sill channel first, then continue with the outward screws (left and right of the center screw).

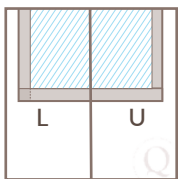

When using L channels, make sure your side channels are installed all the way to the bottom of the sill with the L channel covering the bottom part. When using U channel in the sill, make sure you install side channels to fall above the top part of the u channel (see picture for reference).

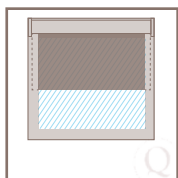

#### NOTES

- Our U channels are multi-purpose—they can be used for inside or outside, as well as side and sill mounting.
- L channels can only be used for inside mounting (side and sill).



# QUILT CRAFT